


If the PAL-2RCASF wall fitting is not mounted square into concrete wall

Figure 1

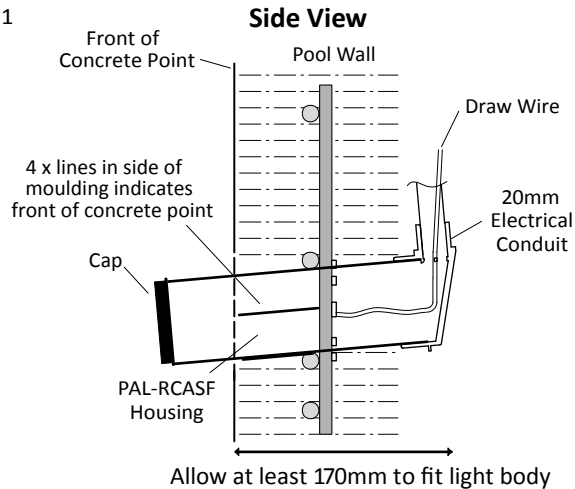

Re Adjustment Details

If the PAL-RCASF Concrete Wall Fitting is not set square into the concrete wall the PAL-RCR Concrete Pool Light can be re adjusted to off set the misalignment.

Re Adjustment Procedure

Unscrew the PAL-RCR flange on the front of the light assembly by turning the flange anticlockwise this separates the body and flange. The body can then be glued into the PAL-RCASF concrete wall fitting with PVC glue as shown in figure 2 and the flange and lamp assembly can then be glued into the PAL-RCASF wall fitting using the eye ball flange fitting to set the complete light assembly square to the concretewall as shown in figure 3.

Figure 2

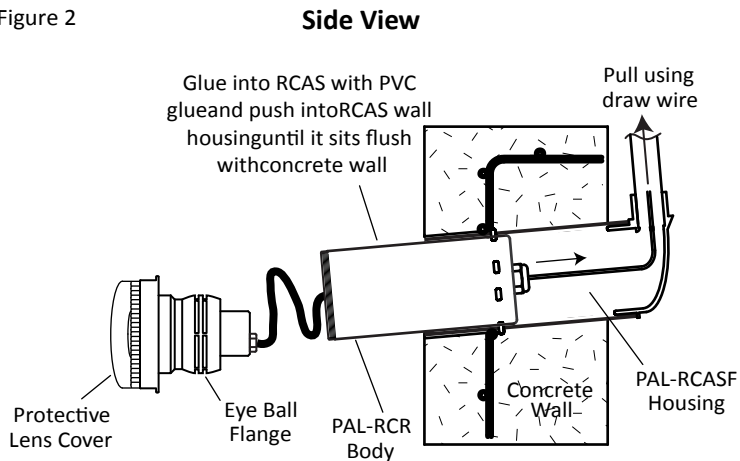


Figure 3

Final Assembly

