



TRI CHLORINE GENERATOR

INSTRUCTION MANUAL AND WARRANTY CARD



Rainbow Pool Products

PO Box 2388, Mansfield Qld 4122

Telephone STD 61-7-3849 5385

Facsimile STD 61-7-3849 5384

Email: info@rainbowpoolproducts.com.au

Web: www.rainbowpoolproducts.com.au

THIS KIT CONTAINS:

Part: **Qty:** **Description:**

a. 1 TRi Power pack



b. 1 Chlorine generating cell



c. 1 Power pack bracket



d. 2 Reducing bushes



WELCOME TO ZODIAC

Congratulations on your purchase of a product from the Zodiac range of pool care products. Zodiac products are designed to let you spend more time enjoying your pool and less on maintenance.

IMPORTANT INFORMATION

YOU MUST READ THIS INFORMATION BEFORE INSTALLATION. ALWAYS READ THE LABEL AND OPERATION MANUAL BEFORE USING. PLEASE KEEP YOUR MANUAL AS IT CONTAINS YOUR WARRANTY.

ZODIAC BELIEVES IN SAFETY FIRST

At Zodiac, we take safety seriously. Always exercise caution when using electrical appliances and follow the instructions. Failure to do so could result in permanent injury, electrocution or drowning.

GENERAL WARNINGS

Zodiac saltwater chlorine generators are designed for domestic swimming pool use only. Contrary use could affect performance and void warranty.

Operating a chlorine generator without water flowing through the cell may cause a build up of flammable gases, resulting in fire or explosion.

Keep equipment out of reach of children.

A damaged supply cord should only be replaced by the manufacturer, authorized service agent or electrician.

When installing and using this electrical equipment, always follow basic safety precautions.

Before performing installation, disconnect all power.

For swimming pools, Australian standards recommend a minimum of 1 Part Per Million (ppm) of free available chlorine must be maintained at all times.

Service to Zodiac equipment should only be carried out by qualified and authorized pool professionals.

CHILD SAFETY

Children should not be allowed to operate or perform maintenance on this product.

No one, particularly children, should sit, step, lean, or climb on any of your pool's operational system.

In the interests of child safety, all components of a pool's operational system should be located at least 3.5 metres away from the pool.

ELECTRICAL HAZARD

To avoid accidental contact with lawn mowers and hedge trimmers, power cords should remain within sight and above ground at all times.

The Zodiac TRI Power pack must not come into contact with water and must be installed at least 3.5 metres from the inside wall of your swimming pool.

Should a lack of water be detected, the unit's electronic flow switch is designed to turn off the system. Interfering with the electronic flow switch could result in personal injury and/or damage to the cell.

One pump per electrical socket only (no ancillary equipment should be connected to the same outlet).

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

The installation of the chlorinator should be carried out by a qualified person in accordance with the Australian wiring rules AS/NZS 3000.

The chlorinator power pack should be located in the correct pool zone and connected to supply via a power outlet that is protected by a residual current device (RCD) having a rated residual operating current not exceeding 30mA. The power outlet should have a degree of protection suitable for the pool zone. Ensure that equipotential bonding of all parts of the pool installation is carried out.

INSTALLATION GUIDE

The following steps will help you get up and running with your new Zodiac TRi Chlorine generator.



POSITIONING THE POWER PACK

1. Locate a suitable space for the power pack bracket. It should be installed no further than 1.8 metres away from the cell - ideally in a filtration shed or close to the filtration equipment.

PLEASE NOTE: if fixing to a post it must have a waterproof panel fitted (behind the unit), at least 450mm wide and 470 mm high.

2. Using screws provided, fasten the bracket securely to the wall and position the power pack on the bracket. Plug into power point, but don't turn on the power.

POSITIONING THE CHLORINE GENERATING CELL

PLEASE NOTE: The cell should always be the last device placed on the water pipe (In the return line to the pool).

3. Ensure the cell is placed horizontally, with the Inlet pipe connecting to the fitting closest to the cell lead.
4. Using screw barrel fittings (supplied), attach the cell to the pipe. If using 40mm pipe, you will need to fit the cell using the reducing bushes (also supplied).
5. When connecting the lead from the power pack to the cell match up the corresponding colours and pins, then fit the end cap.
(Note: Either RED wire can be connected to either RED pin on the electrode.)
6. Plug your pool pump into the outlet socket in the bottom of the TRi (this will allow the TRi timer to control the filtration times)
7. Once all connections are together press the mains power switch to ON.

NAVIGATION BUTTONS

Use the following UI buttons to access and select all menus and commands:



ON/OFF

Turn UI power on/off.



UP/DOWN

Scroll up/down within current menu to highlight a specific menu command.



MENU/BACK

Enters into the main menu, and used to go back to previous menu.















SELECT/ENTER

Select/enters current highlighted menu command. Display the next related command or activate the selected function

USING INBUILT CLOCK AND TIMERS

When it comes to chlorination, every pool is different. To get what's right for you, you will need to set the unit's clock and timers.

SETTING THE CLOCK

1. Switch  power on.
 2. Wait for the start-up sequence to complete.
 3. Press the  button to enter the MAIN MENU.
 4. Use  /  buttons and scroll to SET CLOCK.
 5. Press .
 6. Use  /  buttons to set the hours.
 7. Press .
 8. Use the  /  buttons to set the minutes.
 9. Press .
- TRi will then return to the MAIN MENU.
10. Press  to return to the operating screen.

NOTE: The time is displayed in 24 Hour format

TURNING CHLORINE GENERATION ON

The chlorine generation of the TRi can be controlled in a number of ways:

1. Manually set to an output level, with the operating times determined by an external timer.
2. Using the in-built timers on the TRi unit (refer to 'The Timers')
3. Using a connection to an external controller (refer to 'Connecting to a controller').

To turn the chlorine generation on manually, press the ON/OFF button.

The output level can be set as described in 'Setting the Chlorine Output'.

NOTE: For safety reasons, the TRi chlorine generator will continually dose chlorine for a maximum of 30 hours if left running with no 'OFF' time – unless connected to an external controller. After this time the TRi will switch to 'OFF'.

THE TIMERS

The Zodiac TRi chlorine generator comes with two inbuilt timers that switch the filtration and chlorination system on and off as required.

During swimming season, consider running the system for around 8 hours a day. This can be increased to 10 hours during periods of very hot weather.

In winter, it may only be necessary to run your pool's filtration system for 4 hours a day. These shorter periods of activity will lengthen the life of the unit's electrode.

For best year round results, set the unit to operate during the cooler hours of the early morning, evening or when swimmers are using the pool.



















PROGRAMMING THE TIMERS

To activate the timer, you will need to enter both an ON and OFF time. If no OFF time is entered, the chlorine generator will switch off at the default time of 12:00am (0:00).

You will know that a valid time has been entered when a "T" Symbol is displayed in the top right hand corner of the LCD display when the unit is displaying the 'operating screen'.

USING INBUILT CLOCK AND TIMERS








To program the timer:

1. Press the  button.
2. Press  button to move arrow to 'SET TIMERS'.
3. Press  to enter the 'SET TIMERS' menu.
4. Press  /  to select the timer you wish to set. (Timer 1 or Timer 2)
5. Press .
6. Press  /  to set the hours (on time).
7. Press  to save the hours.
8. Press  /  to set the minutes (on time).
9. Press  to save the minutes.
10. Press  /  to set the hours (off time).
11. Press  to save the hours.
12. Press  /  to set the minutes (off time).
13. Press  to save the minutes.

TRi will return to the 'SET TIMERS' menu.

CLEARING THE TIMERS

To clear the timer:


1. Press the  button.
2. Press  /  button to scroll to 'SET TIMERS'.
3. Press  to enter the 'SET TIMERS' menu.
4. Press  /  to scroll to 'CLEAR TIMERS'.
5. Press .

A confirmation message will appear on the screen.

EXTERNAL TIME CLOCK

At times, it may be desirable to control chlorine generation using an external time switch. If the chlorine generator is turned ON, and the external timer fails to switch the mains power off within 30 hours, the Zodiac TRi will automatically stop chlorinating in order to prevent over chlorination.

To set the chlorine generator to run from an external clock:

1. Clear the Timer by following the procedure outlined in '*Clearing the Timers*'.
2. Press the  button to turn the chlorine generator on.

CHLORINE OUTPUT LEVELS

SETTING THE CHLORINE OUTPUT




The amount of chlorine required by your pool is dependent on a number of factors including the size of the pool, the number of users and the climate.

Output will appear as a percentage on the screen readout, monitor the level according to the reading over time will help ensure optimum output.

For users who upgrade to the TRi-PRO model, chlorine output will be controlled automatically.



To set Chlorine Output levels:

1. Press the  button to turn the chlorine generator on.
2. Press the  /  buttons to set the desired output level.

PLEASE NOTE: if using a pool cover you will need to reduce the chlorine production substantially, please use LOW mode if you use a cover. Simply press LOW button.

CORRECT SETTINGS FOR YOUR TRI CONTROLLED POOL

CORRECT SETTINGS FOR YOUR TRI CONTROLLED POOL








	Free Chlorine (ppm)	pH	Total Alkalinity (ppm)	Calcium Hardness (ppm)	Cyanuric Acid (ppm)	Salt Level (ppm)	Sensors
Australian Standard	1 – 3	7.2 – 7.8	80 – 300	90 – 300	30 – 50	4000 – 7000	
Ideal reading/range	1 – 3	7.5	80 – 140	90 – 300	50	4000 ppm at 27°C**	
To increase*	Add chlorine or increase output of equipment	Add buffer or soda ash (sodium carbonate)	Add sodium bicarbonate	Add calcium chloride	Add Cyanuric acid	Add Salt	
To decrease*		Add muriatic acid	Add muriatic acid or dry acid	Partially drain & refill pool	Partially drain & refill pool	Partially drain & refill pool	
Frequency of testing (in peak season)	Weekly	Weekly	Weekly	Weekly	Weekly	Monthly	Quarterly

If you use an automation or controller system to control your pool you will need to configure your TRi Chlorine generator to allow “communication” between the two.



You must set the controller type on the TRi before making the wiring connection.

SETTING THE CONTROLLER (To be done before making a wiring connection)

1. Switch power to the TRi unit on.
2. Wait for the start-up sequence to complete.
3. Press the  button.
4. Press the  button to scroll down to ‘CONTROLLER’.
5. Press  to enter the controller menu.
6. Press  /  to highlight the controller being used.
7. Press  to save the controller setting.
8. TRi will return to the main menu.
9. Press  to return to the operating screen.

ATTENTION JANDY 'REV L' OR LATER USERS

It is critical that the controller setting be set to the correct Zodiac, Jandy or Pentair controller designation. There are a number of different revisions locked into the TRi software. Please see the user manual to determine the model and/or revision you are using. If the incorrect setting is selected, damage can be caused to the Jandy Aqualink Control Unit.

CAUTION WHEN WIRING TO A CONTROLLER

IMPORTANT

Wiring of the controller should be completed by an authorised pool equipment installer.

Before any wiring connections/disconnections ensure mains power is removed from both the controller and the Zodiac TRi unit.

When connected to a controller, the TRi Chlorine generator acts as the 'slave' - responding to requests. This means timer settings are ignored and the output settings cannot be changed, although all other 'menu' functions are still accessible, except for LOW and BOOST modes.

WIRING TO A CONTROLLER

The following instructions should be read in conjunction with the installation guide provided with the Controller.

1. Remove silver 'dress' cover by pressing in at the sides where indicated below and lift.



2. Remove the two screws which attach the lower cover to the main unit:



CONNECTING TO A CONTROLLER

3. Remove the lower cover from the TRi unit.

NOTE: If using either pH upgrade or PRO unit – carefully disconnect the ribbon cable from the TRi unit.

4. Remove the small white bung closest to the centre of the lower panel of the TRi unit.
5. Thread the controller cable through the hole (a grommet may be necessary depending on the size of the cable being used).



6. Attach a cable tie to the controller cable as shown in the diagram. The wiring colour codes are outlined below:



Depending on the make of the Controller, make the following wiring connections:

Polaris EOS / Jandy / Zodiac Aqualink / Aqualink TRi

Green wire (0V) to '0V' terminal on the TRi

Red wire to the (+V) 'POS' terminal on the TRi

Yellow/White (B) wire to 'B' terminal on TRi

Black wire (A) to 'A' terminal on TRi

Pentair Intellitouch

GREEN wire to 'B' terminal on TRi

Red wire to 'POS' terminal on TRi

Yellow wire to 'A' terminal on TRi

Black wire to '0V' terminal on TRi

TESTING THE WIRING CONNECTION

Once a connection has been made between the Controller and the Chlorine generator, it will need to be tested.

1. Turn on the power to the Controller and the Zodiac TRi.
2. If successful, a 'T' symbol will appear in the top right hand corner of the screen after about 20 seconds.
3. If the controller does not connect, turn power off to both the devices and try again.

VERIFY THE WIRING CONNECTIONS

To verify the connection:

1. Switch the TRi unit on and check the controller setting (follow instructions under 'SETTING CONTROLLER').
2. Re-test the connection.

Note: For safety reasons, the Zodiac TRi reverts to the OFF setting if the communication connection is lost.


CONNECTION TO CONTROLLER FOR POOL/SPA COMBINATIONS

To connect a Zodiac TRi unit to Pool or Spa Valves, you will need to make a "splice" into the control lines from the Controller, located inside the controller itself.

For further information, consult the installation manual of the Controller being used.

If your pool has a cover, you should set the output level to “low”. This is also known as “winter” mode. Reducing your chlorine output will help prevent damage to your pool’s cover and other equipment.


MANUAL SETTING

1. To select Low mode press .

This will drop the chlorine output to around 10%.

2. ‘Low’ will appear on the screen.

Note: Low or Winter mode cannot be selected when TRi is being controlled by an external controller.

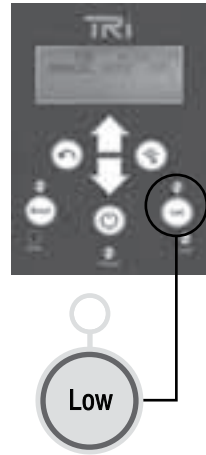

AUTOMATIC SETTING

The Zodiac TRi can be connected to the valves of an automatic pool/spa system.

When the input from the valves is set to ‘Low’ the TRi will automatically revert to ‘Low’ mode and the output will be locked at 10%

Details of the wiring connection are outlined in the “*Connection to Automatic Pool/Spa Valve*” section of this manual.

For users who have upgraded to the TRi-pH or TRi-PRO, the automatic pH/ACL control function is disabled when in LOW mode.

THE BOOST SETTING

At times your pool may require a larger than normal application of chlorine. The Boost function is used to rapidly add chlorine.

In BOOST or “Superchlorinate” mode, output settings are temporarily overridden and the chlorine generator runs for 24 hours at 100% Chlorine Production.

In ‘TIMER’ mode, the circulation pump will run for 24 hours, before automatically reverting to previous output / timer settings.

In ‘MANUAL’ mode, the chlorine generator will run at 100% for a cumulative total of 24 hours before reverting to the previous output setting.


NOTE:

The ‘BOOST’ mode cannot be engaged under the following circumstances:

- 1) If the TRi is in the ‘OFF’ operating mode. The chlorinator must be ‘ON’ for BOOST to be engaged.
- 2) If you have upgraded to the TRi-PRO
- 3) Or from the front panel when the TRi is being controlled by an external controller.

In most cases a BOOST function can be set from the controller menu.

Consult your third party controller manual for more information.

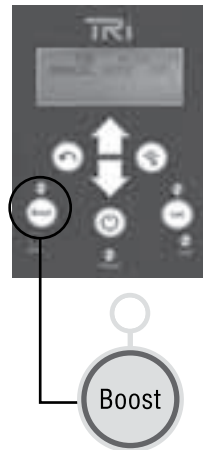

SETTING THE BOOST MODE

To activate the BOOST setting:








Press the  button.

‘BOOST’ will be displayed on the screen and chlorine generation will commence.

HELP AND TROUBLESHOOTING


The Zodiac TRi chlorine generator automatically provides a number of inbuilt warnings that can help identify problems and offer solutions.

To access the HELP menu:

1. Press the  button.
2. Using the  /  buttons, scroll to the 'HELP/DIAG' menu.
3. Press  to enter the 'HELP/DIAG' menu.
4. Once in the 'HELP/DIAG' menu, use the  /  buttons to scroll to the error/warning that has been displayed.
5. Press .

A number of suggested solutions are momentarily displayed, in order of priority.

After displaying, the TRi automatically reverts back to the 'HELP/DIAG' menu.

6. To exit to the default operating screen wait ~5 seconds
OR press the  button.

To keep your TRi Unit in the best possible condition it is recommended regular maintenance should be performed.

INSPECTING AND CLEANING THE ELECTRODE

In areas that experience calcium hardness the TRi electrode will benefit from cleaning.

To clean your electrode:

1. Switch off the filter pump and chlorine generator, close necessary valves and unplug the cell terminal cap.
2. Unscrew the retaining ring and remove the electrode. If calcium buildup is present, immerse the electrode in cell cleaning solution without immersing the terminals.
3. We recommend using Zodiac Salt Chlorinator Cell Cleaner to clean the electrode. However you can mix your own by carefully adding one (1) part of Hydrochloric (Muriatic) acid to ten (10) parts water. Stronger solutions will shorten terminal life.
4. Allow the cleaning solution to dissolve the calcium deposits for about 10 minutes. Dispose of the cleaning solution at an approved Council Depot and never into storm water or sewage drains.
6. Rinse the electrode in clean water and re-fit the electrode in the cell housing.
7. Replace the cell head and plug assembly and reset valves and switches. Turn pump and TRi on.
8. Confirm chlorine output and settings on the power pack. Timer settings will be automatically retained.



NO FLOW

Diagnosis: Insufficient water flow in the cell.

This could mean the circulation pump has ceased to function, or the filter needs cleaning. The chlorine output will be turned off at this time.

CHECK SALT

Diagnosis: Salt level is between 3000 and 4000 ppm, depending on the water temperature.

Always maintain a salt level above 4000ppm. if you don't know what your salt level is or how to test it, consult your local pool care professional.

CHECK POWER SUPPLY

Diagnosis: There could be a problem with the power supply. Turn power off at the power point and consult your local pool care professional.

CLEANING

Diagnosis: The cell is in the process of reversing polarity.

Wait approximately 5 minutes and chlorine production should resume as normal.

Additional information about this product can be found at zodiac.com.au

For further information and assistance please consult your local pool professional.

Your Local Dealer:

Express Warranty*

Zodiac Group Australia Pty Ltd (**Zodiac Australia**) warrants that the Zodiac TRi Saltwater Chlorine Generator will be free from defects in materials and workmanship for the period of 3 years from the date of purchase.

***The warranty applicable to commercial application is limited to 12 months from the date of installation.**

Conditions

- 1 This express warranty only applies if the Product has been purchased from a dealer authorised by Zodiac Australia to supply it (**Authorised Dealer**).

Purchase from an Authorised Dealer ensures that the product is a genuine Zodiac product, that it is the version designed for Asia Pacific conditions, and that the Purchaser has access to appropriate technical knowledge and advice.

- 2 Zodiac Australia's liability under this express warranty is limited, at its option, to the repair or replacement of the Product or the payment of the cost of having the Product repaired or replaced.
- 3 This express warranty does not apply in the following circumstances:
 - (a) if the Product has not been installed in accordance with Zodiac's installation instructions;
 - (b) if the Product has been modified other than as authorised by Zodiac Australia or if a component part has been replaced by a part that is not a genuine Zodiac product;
 - (c) if a defect results from use of the Product outside recommended operating conditions; or
 - (d) if a defect results from damage (including damage to any internal electronics) caused by a power surge or lightning strike.

Zodiac chlorinators are designed and tested in accordance with International Standard EN 61000-6-1 immunity measurements. They are designed to tolerate minor fluctuations (2000 volts) in power supply that can be reasonably expected to occur in the energy grid. They will not tolerate power surges outside these limits nor will they withstand lightning strikes.

- 4 Without limiting 3 above, products sold by Zodiac Australia are designed for use with swimming pool water balanced in accordance with Australian Standard AS3633-1989 with a pH range of 7.0 - 7.8. Maximum chlorine readings should not exceed 4ppm. Where pool water is not maintained within these parameters, Zodiac Australia will not be responsible under this express warranty for any resulting damage, including damage caused by corrosion, scaling or stress loading.
- 5 Replacement parts supplied under this express warranty are warranted to be free from defects in materials and workmanship for the remainder of the warranty period or for 12 months from the supply of the replacement, whichever is longer.
- 6 Warranty claims relating to replacement of the electrodes for LM series, C series, Duo Clear and D series chlorinators are subject to the following pro-rata pricing procedure. The Purchaser must pay for the replacement electrode a proportion of the cost equal to that proportion of the warranty period during which the original electrode functioned effectively. The warranty period for the replacement electrode is the remainder of the warranty period for the original electrode or 12 months from the supply of the replacement, whichever is longer. The Purchaser must pay full cost for any replacement electrodes after the first replacement.

Product warranty registration

- 7 Purchasers should register their Products as soon as conveniently possible after purchase by completing a Product Warranty Registration Form and posting it to Zodiac Australia at the address shown on the Form or by registering online at www.zodiac.com.au.
- 8 Product registration must occur, and proof of purchase must be received by Zodiac Australia, prior to any warranty work being approved. Where applicable, a serial number, installation date and name of installer is required as part of the registration process.

How to make a warranty claim

- 9 The Purchaser must telephone or email Zodiac Australia Customer Service and obtain a warranty ID number for the warranty claim.

Contact details are:

Zodiac Group Australia Pty Ltd

219 Woodpark Road
Smithfield NSW 2164

Customer Service

Telephone: 1800 688 552
Email address: aftersales@zodiac.com

- 10 Zodiac Australia reserves the right to determine, in relation to each warranty claim, whether the Product should be returned to the Authorised Dealer at the address where the Purchaser purchased the Product or whether warranty service will be provided in the field, repaired at a Zodiac workshop or at the premises of an authorized Zodiac warranty agent.
- 11 If it is necessary for the Purchaser to incur freight charges in making a valid claim under this warranty, Zodiac Australia will reimburse the Purchaser for charges reasonably incurred upon proof of the charges.

Additional guarantees, rights and remedies

Australian Purchasers - Guarantees under the Australian Consumer Law

- 12 The benefits of this express warranty are in addition to other guarantees, rights and remedies Australian consumers have under the Australian Consumer Law.
- 13 Zodiac Australia products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Purchasers in other Countries

- 14 The laws and regulations of other countries may confer on Purchasers in those countries additional rights and remedies. To the extent that they cannot be excluded or modified, Purchasers have the benefits of those rights and remedies in addition to the benefits of this express warranty. To the full extent that it is permissible to do so, those additional rights and remedies are excluded or modified so as to be consistent with Zodiac Australia's express warranty.

INCONSISTENCY WITH WARRANTY STATEMENTS IN PRODUCT MANUALS OR OTHER DOCUMENTS ACCOMPANYING PRODUCTS

If any warranty statements in a Zodiac Australia product manual or other document are inconsistent with the above Express Warranty and Guarantees, the above overrides and replaces the inconsistent statements.