

ASSEMBLY

Trim the projecting tubing until it is level with the concrete or covering. Place PVC glue on the outer part of the nozzle and the inner part of the swivel joint (Fig. 3) so that the two PVC parts are firmly joined and to prevent water leakage. Cover the housing unit with glue and insert it in the PVC tube or the wall connection tube (no.5). Tighten to obtain the proper alignment (Fig. 3).

ATTENTION: IT IS VERY IMPORTANT TO GLUE THE INNER PART OF THE SWIVEL JOINT.

START-UP

Before filling the swimming pool, open the passage of water, and the protection covers (no. 4) will be released by the water pressure. After the protection covers have been removed, insert the inner body by turning to the left to "CLOSE" (Fig. 5). The unit will now be ready for use.

Use a screwdriver to regulate the flow of water, following the instructions under the faceplate paragraph (Fig. 4)

