



Windows 7, 64 & 32 bit Palintest Com Port Installation Guide

- 1. Download the drivers from the Palintest website. Save them to the PC in a local folder. For this guide, the drivers have been saved to the Desktop in a folder called Com Port Drivers.
- 2. Connect the instrument to the PC with a USB cable.
- 3. Switch the instrument on. In the instrument System menu, scroll to the USB option, and press the left or right arrow to set Com Port.
- 4. Windows 7 will attempt to load drivers automatically and look on the internet if connected. It will fail to locate drivers and show a message bubble. Ignore the bubble.




5. Click the Start orb and type 'dev'. Select Device Manager from the list. You will need administrator privileges.






6. In the list shown in the Device Manager window, you will see '7500 Series' under the 'Other devices' entry. It has an exclamation point next to it to indicate that it has no drivers installed.

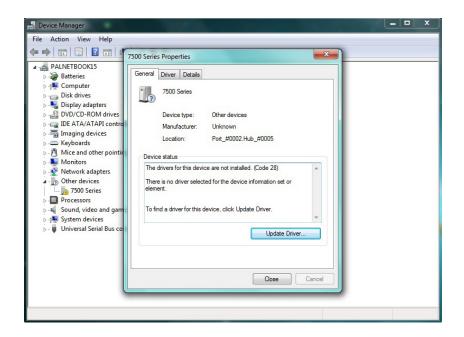


Double click on '7500 Series' to bring up the Properties window for the 7500 Series. Click on 'Update Driver'.

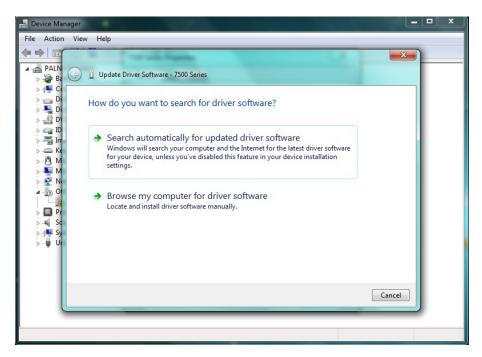


7. Select 'Browse my computer for driver software (advanced)'.



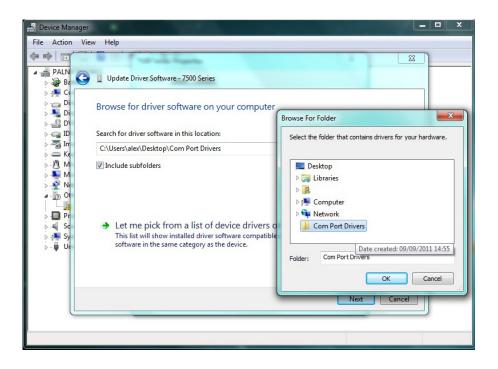


- 8. Click the Browse button, and browse to the folder where you saved the drivers. The image above shows the folder selected. After the folder has been selected, click the Next button.
- 9. Windows 7 will then show a security message.

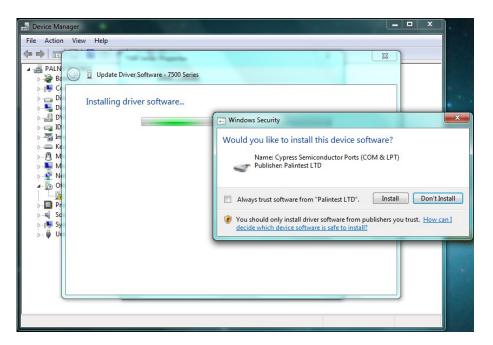

Click the Install button.



10. The drivers will be loaded onto the PC and when its finished the following screen will be shown. Click the Close button.

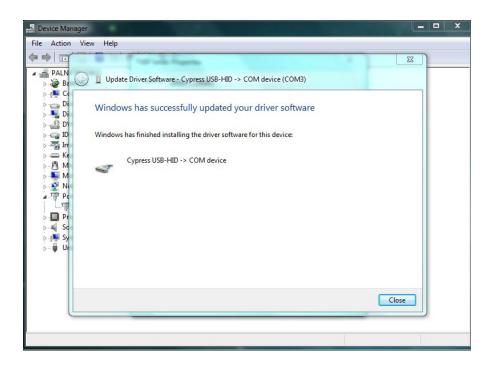

11. In the future, when the instrument is connected to this or any other USB port, the PC will automatically load the drivers and show an information bubble above the taskbar.





Rainbow Pool Products

PO Box 2388, Mansfield Qld 4122 Telephone STD 61-7-3849 5385 Facsimile STD 61-7-3849 5384

Email: info@rainbowpoolproducts.com.au Web: www.rainbowpoolproducts.com.au