

onga[®]

Pentair Water



Leisure Time Sand Filter

Should you the installer or owner be unfamiliar with the correct installation or operation of this type of equipment you should contact the distributor/manufacturer for the correct advice before proceeding with the installation or operation of this product.

Relax - you've bought an **ongá** ...

Congratulations on your decision to purchase an Onga product. Onga is one of the best know brands in its field, with a proud local and international reputation.

Onga is a brand for reliability, value for money and technological innovation. You will find Onga product wherever people need to move water in 3 broad markets covering:



Residential

Technologically advanced solutions for moving and treating water in the Home, Garden, Pool and Spa.



Agricultural

Innovative Stock and Crop water management solutions for Primary Industries.



Process

Water movement products for Building services, Emergency services and Original Equipment Manufacturers.

1. **Continual Product Improvement**

We employ the best engineers both in Australia and around the world to develop new and better ways to take water further.

2. **Operational Excellence**

There is only one standard that we set ourselves for both product quality and the quality of our service. That standard is excellence... to have no-one better than us at what we do... nothing short of that is acceptable. Our commitment to quality is reinforced with our ISO 9001:2000 accreditation.



3. **A Fair Price**

Onga products are neither the cheapest nor the most expensive in their field. Our products do, on the other hand, always represent very good value for money; they always have and they always will.

4. **Our Team of Dealers**

The hand picked authorised Onga dealer network throughout Australia and worldwide are second to none. We invest considerable time and resources training and supporting them through the Onga Training Academy.



ongga[®]

Pentair Water

TABLE OF CONTENTS

1.	Model Data	4
2.	Applications	5
3.	Installation	6
4.	Operation	10
5.	Service and Maintenance	12
6.	Trouble shooting	15
7.	Warranty	17



Model Data

The operator must be provided with the owner’s manual. This must be read before operation and followed during operation.

These instructions are a guide only. Users not familiar with pool equipment should seek advice from suitably qualified persons with experience in pool equipment installation.

The Australian made Leisure Time range of sand filters are designed to give you sparkling clean swimming pool water without requiring too much maintenance. These filters incorporate a unique balanced flow design which ensures that water is evenly distributed over the entire filter bed for more efficient operation.

Technical Data

	LSF20	LSF24
Filter Diameter (mm)	508	610
Filter Area (m ²) (Internal)	0.196	0.265
Max Working Pressure (kPa)	230	230
Maximum Flow Rate (lpm)	168	221
Design Flow Rate (lpm)	145	190
Min Flow Rate for Backwashing (lpm)	119	162
Pool volume @ 6 hour turnover (litres)	60,000	80,000
Filter Height (to top of valve)*(mm)	760	860
Required mass of filter media:		
Sand (16/30 grade) (kg)	60	100
Zeolite (kg)	45	75
Valve Size (connection to PVC) (mm)	40	40
Connection to suit PVC pipe	40mm internal	40mm Internal

*It is recommended to ensure there is at least 600mm of clear space above the top of the filter to facilitate servicing.



WARNING

Due to excessive cycling, this filter is not suitable for use on inbuilt In-floor Cleaning Systems.

Applications

Features	Benefits
Eight easy fold under drain laterals	Increases filtering efficiency for clearer water
Manufactured from high quality engineered plastics	Extends filter life and protects against UV Radiation
Large Sight Glass	Easy to view sight glass minimises waste water during backwashing
Six position Multi-port Valve	Provides convenient use of available functions all year round
Fitted Barrel Unions	Ease of installation and servicing
Colour coded Pressure Guage	Shows at a glance when back washing is required

Filter Application - General Information

This filter is designed for use in domestic/residential swimming pool installations with correctly sanitised fresh or salt chlorinated water. Suitable for use with sand or Zelbrite filter media.

1. Locate the filter system as close to the pool as practical.
2. Place the filter on a level stable foundation, preferably a concrete pad or paving.
3. Position all equipment to provide ease of access for future servicing.
4. Protect the filter and pump from weather and direct sunlight by ensuring that they are properly housed.
5. Ensure there is sufficient space to provide adequate ventilation to electric pump motor.
6. Clean a new pool as well as possible before filling pool and operating filter. Excess dirt and large particles of foreign matter in the system can cause serious damage to the filter and pump.
7. Ensure pump is compatible with filter specifications.

Installation



Hazardous Pressure

Incorrectly installed or tested equipment may fail, causing severe injury or property damage. Read and follow instructions in owner's manual when installing and operating equipment.

Have a trained pool professional perform all pressure tests.



All glued fittings and pipe work should be allowed to dry to atmosphere for 24 hours before closing installation. Failure to do so could cause injury or installation failure.



The fittings on these filters are constructed of ABS. Some PVC jointing compounds are incompatible with ABS possibly causing failure to the product. Check compound suitability prior use.

	! DANGER	BEFORE WORKING ON THE FILTER:
	<p>Hazardous Pressure! Can cause severe injury or major property damage from tank explosion.</p>	<ol style="list-style-type: none"> 1. Stop Pump 2. Release all pressure from system, by turning valve handle to waste.

	! WARNING	BEFORE WORKING ON THE PUMP OR MOTOR:
	<p>Filter pumps require hazardous voltage which can shock, burn, or cause death.</p>	<p>Disconnect power to motor.</p>

Carton Contents

Carton A (Tank Carton)		Carton B (Valve Carton)	
Filter Tank	x1	Six Position Multiport Valve	x1
Centre Stem Assembly	x1	Colour coded Pressure Gauge	x1
Valve to clamp half	x2	ABS Barrel unions (White)	x2
Clamp Nut and Bolt	x2	Waste Barrel union (Clear)	x1
Valve to Tank o-ring	x1		

Tools are required to tighten clamp nut and bolts.


Installation of Filter should only be carried out by qualified personnel. Ensure that the under-drain assembly (hub, laterals & tube) are properly assembled & installed prior to adding filter media (sand or zelbrite).

Internals Assembly

1. The filter internals comprise of a collector hub and eight (8) laterals, which are supplied partially assembled and are stored in the filter tank prior to shipment.
2. Carefully inspect the laterals and hub prior to assembly for any visible defects.
3. Position the hub in the centre of the tank and push the laterals down until they engage with an audible “click”.

Loading Sand Media

4. To keep sand out off collector assembly, cover the top of collector tube before pouring sand into filter.
5. To support laterals and prevent lateral breakage during loadings, fill tank about half full of water before loading sand.

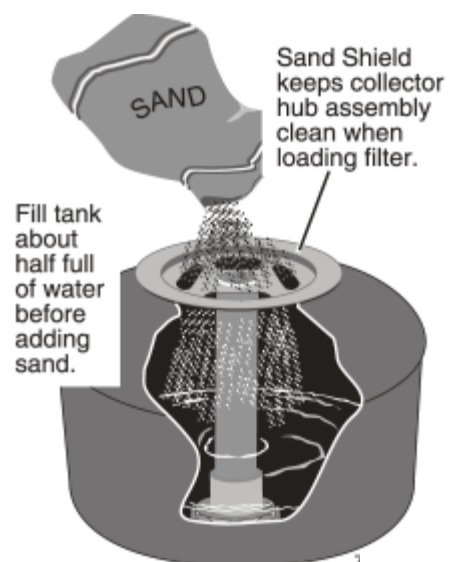

6. Pour sand into filter, making sure that the sand is of the correct type and quantity for the particular filter model (Refer filter label). Ensure that the top of the sand/media is level. Ensure that the centre tube remains central to the neck of the filter. Make sure gasket area on top of tank is free of sand before installing valve.

Installation of Multi-Port Valve

7. Before installing valve, double-check that correct quantity of sand has been loaded.
8. Remove the cover over the collector hub tube.
9. Install o-ring on valve flange; make sure o-ring is clean, and has no nicks, tears, or scrapes and lubricate with silicon based lubricant.
10. Make sure tank and valve flanges are clean and free of sand; put valve on top of tank. Vertical pipe of collector assembly inserts into base of valve.
11. Install clamp; make sure screws are positioned for easy access for filter maintenance. Valve port labelled “Pump” should point toward pump.



Hazardous pressure. Clamp will not hold unless it is seated properly! DO NOT START PUMP until clamp is seated correctly.

12. Tighten clamp screws until clamp ends are a maximum of 3mm apart. Tap around outside of clamp with a mallet to help seat clamp.
13. Connect pipe from pump discharge to valve port labelled “PUMP”; use union half provided. Assemble union as follows for leak free operation:
 - O-ring and sealing surfaces must be clean.
 - Assemble hand tight only (No wrenches).
 - NO pipe compound or teflon tape on unions.
14. Install the pressure gauge, use thread tape and hand tighten. Note: Do Not Overtighten!

15. Complete the plumbing installation.
16. System is ready to start up.
17. If you notice a leak around the clamp area after 15-30 minutes of running, repeat steps 9-10.

 IMPORTANT

If there are leaks from beneath valve/clamp area, STOP PUMP, release all pressure by turning handle on Multiport valve to 'waste', remove clamp and valve and clean sealing surfaces.

Operation



The filter operator or owner must be provided with this owner's manual. This must be read before operation, and followed during operation.



Incorrectly installed or tested equipment may fail, causing severe injury or property damage. Read and follow instructions in owner's manual when installing and operating equipment. Have a trained pool professional perform all pressure tests.



Hazardous Pressure

To avoid explosion and possible severe or fatal injury, filter system pressure must not exceed 33psi (230kPa) under any circumstances. **NEVER** test this filter system with compressed air; never operate system with water temperature above 38°C.



To prevent equipment damage and possible injury, turn pump OFF before changing valve position.



Do not add chemicals directly into the pool skimmer. Adding undiluted chemicals may damage equipment and void warranty.

Multiport Valve Settings

Valve Setting

Purpose/Flow



FILTER

Normal filtration and vacuuming; water goes through filter to pool.



RINSE

For initial startup cleaning and sand bed leveling after backwash; water goes through filter to waste.



RECIRCULATE

Circulates pool water; bypasses filter.

Valve Setting

Purpose/Flow



BACKWASH

Reverses flow for cleaning; water goes through filter to waste.



CLOSED

Shuts off all flow to filter and pool.



WASTE

Lowest pool level or drains pool; water bypasses filter, goes to waste.

Start-up Procedure

1. Open system valve and make sure pump is filled with water. Make sure pool water level is 2" (50mm) above bottom of skimmer opening.

2. With pump OFF, set valve to 'BACKWASH' position.



BACKWASH
Reverses flow for cleaning; water goes through filter to waste.

3. Start pump, circulating water through filter to waste.
NOTE: To prevent pump running dry, be sure water level never drops below bottom of skimmer inlet. Add water to pool if necessary to keep skimmer flooded while back-washing and rinsing.

4. Backwash until water runs clear through the waste barrel union (1-5 minutes)

5. Stop Pump; set valve to 'RINSE' position.



RINSE
For initial startup cleaning and sand bed leveling after backwash; water goes through filter to waste.

6. Start pump; run pump for 1 minute.
Note: for Zelbrite repeat steps 1 through to 6 three times.

7. Stop pump; set valve to 'FILTER' Position.



FILTER
Normal filtration and vacuuming; water goes through filter to pool.

8. Filter is now ready for service.
9. Record clean starting filter pressure gauge reading as a reference.
10. For new pools, backwash once a day until pool water is sparkling clear. Backwash when pressure gauge shows 5 to 7 psi (35 to 50kPa) higher than clean starting pressure (refer to step 9).

Service & Maintenance



Hazardous pressure. Stop pump and release all pressure from system before working on filter, valve, or clamp.

General: Wash outside of filter with a mild detergent and water. Rinse off with hose.

DO NOT use solvents to clean filter. Inspect sand/media bed at least once a year to remove foreign material which has not been back-washed out of the system.

NOTE: When the sand/media bed gets hard and crusty on top, remove all the old sand/media and replace it with new sand/media. Alternatively, if the pressure guage does not return to within 40kPa of clean filter pressure after back-washing it is time to replace the filter media.

Weekly Pool Equipment Inspection

1. Check pressure during operation. When pressure is 5 to 7 psi (35 to 50 kPa) higher than clean operating pressure, backwash filter (see instructions under Operation, page 10-11).
2. Except during hot weather with heavy skimmer loads, operating filter 6 to 12 hours per day should be sufficient. Carefully monitor water chemical balance and follow recommendations of your local pool professional.

Water Maintenance

Keep water level at least 2" (50mm) above bottom of skimmer opening. Failure to do so can allow air to enter system, causing pump to lose prime and air to enter filter.

Maintain pH between 7.2 and 7.6 in pool.



To prevent damage to system components, keep water temperature below 38°C at all times.

Vacuum Pool

(Refer cleaner operating manual or consult your local pool professional)

1. Fill vacuum hose by submerging in water from one end to the other.
2. To vacuum, insert hose into skimmer suction manifold or into vacuum line in pool wall. See instructions provided by the pool builder or pool manufacturer. Start pump, making sure it is primed and pumping.
3. After vacuuming, clean pump trap basket to remove accumulated debris, then check filter pressure gauge. If reading is 5 to 7 psi (35 to 50 kPa) higher than initial operating pressure, backwash filter.

Lower or Drain Pool

1. Turn pump 'OFF' ; set valve handle to 'WASTE'.
2. Use Vacuum cleaner hose and head.
3. Start pump; run until pool is lowered to desired level.
4. Turn pump 'OFF' set valve handle to 'FILTER'
5. Start pump.

Multi-Port Valve Service



If valve is leaking during normal operation it will need to be repaired by an authorised Pentair Water service technician.

Valve Removal




Hazardous pressure. Stop pump and release all pressure from system before working on filter, valve, or clamp.

NOTE: If Multi-Port Valve is below pool water level, close suction and discharge valves before disassembly to prevent draining pool.

1. Disconnect piping from pump and pool.
2. Remove clamp.
3. Remove valve from filter top.

4. To re-install valve, follow instructions, BE SURE to follow clamp tightening instructions.

Tank Assembly

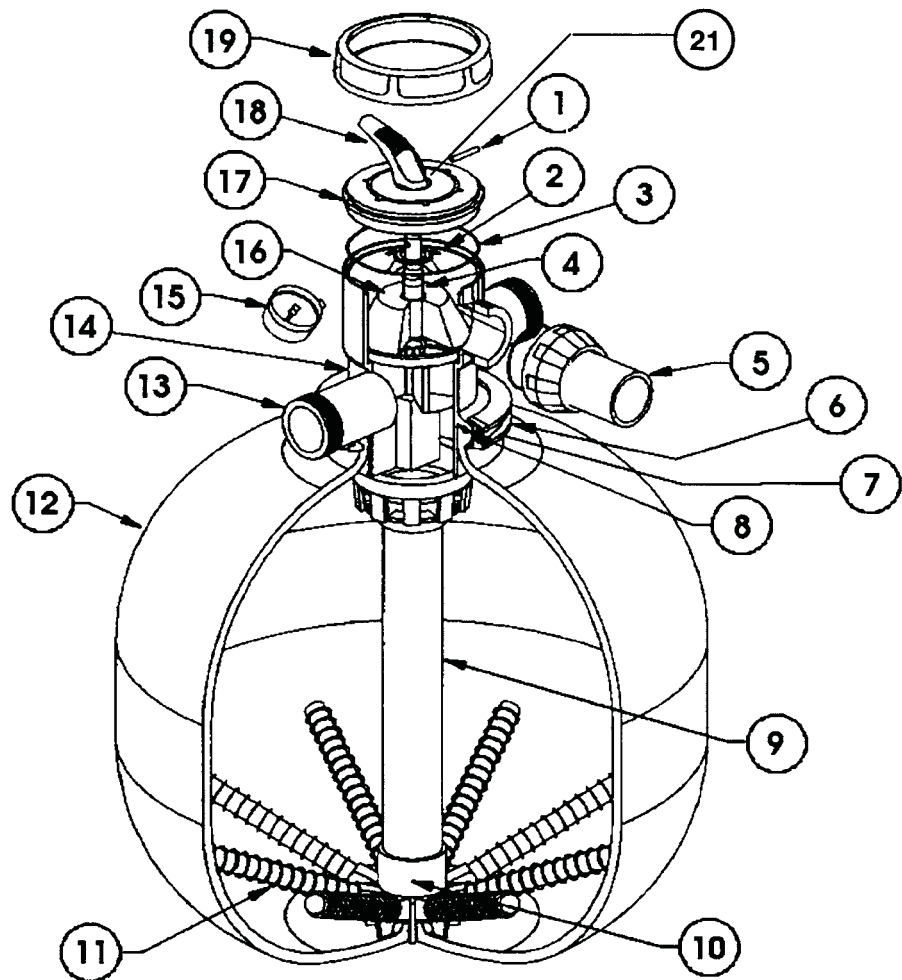

Item	Description	Qty	Item	Description	Qty
1	Pin - Valve Handle	1	11	Lateral	8
2	Spring - Multiport Valve	1	12	Tank Assembly	1
3	O-ring - Multiport Valve Cap	1	13	Tail - Clear	1
4	O-ring - Multiport valve rotor	1	14	Valve Body - Multiport	1
5	Barrel Union	3	15	Pressure Gauge	1
6	Nut & Bolt - Clamp (Set of 2)	1	16	Rotor & Gasket - Multiport	1
7	Clamp - Half	2	17	Valve Cap	1
8	O-ring - Valve to Tank	1	18	Valve Handle	1
9	Centre Tube Ass. (Inc 9,10,11)	1	19	Valve Top Ring	1
10	Hub - Underdrain	1	20	Multiport Valve Complete	1
			21	Decal	1

Trouble shooting

Symptom	Cause	Remedy
No Water Discharge	Pool water level too low	Fill Pool to correct level.
	Air leaks in inlet fittings to pump.	Check and tighten all connections. Teflon tape fittings.
Short Filter Cycles	Filter Dirty	Filter not backwashed for long enough period.
		Replace Media (Sand or Zelbrite)
	Algae present in Pool water.	DON'T RUN FILTER WITH LIVE ALGAE IN POOL. Check the chemical condition of pool water and refer to Pool Water Chemical Treatment. Note: Incorrect chemical treatment will greatly shorten filter cycle.
Filter Startup Pressure High and Water Flow Low	Filter requires backwash	Follow backwash procedure outlined in Manual.
	Return Line restricted	Check for flow at return
Filter Startup Pressure Low and Water Flow High	Skimmer Basket full of leaves or debris	Clear Skimmer Basket of all foreign matter and debris.
	Pump Strainer Lid not sealed corectly.	Refer to pump Owners Manual for correct procedure for sealing strainer lid correctly.
	Pool water level too low.	Fill Pool correct level.
	Pump Impeller Blocked	Call an authorised service agent to service pump.
	Blockage in suction line	
	Air Leak in suction line	

Trouble shooting

Leaking From Filter Tank Joint	Tank o-ring dirty	Call an authorised service agent to service pump.
	o-ring incorrectly fitted	
	o-ring damaged (pinched)	
	Clamp Band not correctly fitted	

Should problems persist, contact your nearest Pentair Water Service Agent.

Pentair Water Product Warranty

Pentair Water warrants that, when this product is used for the purpose it was designed, is correctly housed and vented against weather, vermin, dust etc., that it will be free of material and manufacturing defects at the time of the original purchase. **This warranty is limited to the cost of the product and does not cover third party costs including the costs of electricians, plumbers, etc. unless authorised by Pentair Water.**

TERMS AND CONDITIONS APPLICABLE INTERNATIONALLY

How long the warranty is effective Internationally

1) This Pentair Water product is warranted for 12 months for all parts from the date of the first consumer purchase. Should any parts fail as a result of such defects within the specified period, the part will be replaced free of charge. (This does not include travel charges, removal and reinstallation charges.)

TERMS AND CONDITIONS APPLICABLE IN AUSTRALIA AND NEW ZEALAND

- 1) YOU SHOULD CAREFULLY READ THE INSTRUCTIONS SUPPLIED PRIOR TO USING THIS PENTAIR WATER PRODUCT.
This product is to be installed and operated in accordance with the instructions provided. This warranty will not apply if it is used in a manner other than in accordance with the instructions.

What the warranty covers:

Pentair Water warrants its products to be free of defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, then Pentair Water will, at its sole option repair or replace the product with a like product. Replacement product or parts may include re-manufactured or refurbished parts or components.

How long the warranty is effective:

- 1) **This Pentair Water tank is warranted for 10 years (Multi-port Valve and laterals 12 months) from the date of the first consumer purchase.**
- 2) **Infield service by an authorised Pentair Water Service Agent will be free of charge for the first 12 month period from date of the first consumer purchase when unit is found to have failed due to defective workmanship or material supplied by Pentair Water Australia. Infield Service outside this period (first 12 months) will incur a travel, removal & reinstallation fee payable by customer.**
- 3) **Where this Pentair Water product is sold for commercial application as defined in the relevant Trade Practices and Consumer Protection legislation the warranty shall be for a period of six months from the date of purchase by the end user.**

Who the warranty protects:

This warranty is valid only for the consumer purchaser.

What the warranty does not cover:

- 1) **Damage, deterioration or malfunction resulting from:**
 - a) **accident, misuse, negligence, fire, water, lightning, or other acts of nature, unauthorised product modification or failure to follow instructions supplied with the product;**
 - b) **repair or attempted repair by anyone not authorised by Pentair Water;**
 - c) **any damage to the product due to shipment;**
 - d) **removal or installation of the product;**
 - e) **causes external to the product such as electric power fluctuations or failure;**
 - f) **use of supplies or parts not meeting Pentair Water specifications;**
 - g) **normal wear and tear;**

Pentair Water Product Warranty (Continued)

- h) water ingress or exposure to abnormal corrosive conditions or “run dry” conditions;
 - i) any other cause which does not relate to a product defect.
- 2) Damage caused to the product as a consequence of use of another manufacturer’s product used in conjunction with Pentair Water and affiliate companies.
 - 3) Ingress of insects into the unit causing electrical malfunction is not warranted, care should be taken to avoid this occurrence.

Spare Parts:

Spare parts are usually stocked for a reasonable period of time following last production.

Pentair Water does not warrant that spare parts will be made available for the whole of the reasonable period and reserves its right to cease supplying spare parts or providing facilities for repair of spare parts in circumstances which are beyond its control including the requirement to remove spare parts from sale as a consequence of changes in the law or otherwise as it deems fit.

How to get service:

In Australia please contact 1800 664 266 In New Zealand please contact 0800 664 269

Claims under this warranty must give evidence of date of purchase, model and serial number of the product and the claimants name, address and telephone number.

- 1) **To obtain warranted service, you will be required to provide to either Pentair Water state office or recommended service agent:-**
 - a) the product;
 - b) confirmation in writing specifying the nature of your claim;
 - c) proof providing date of original purchase;
 - d) full contact details including name and address;
 - e) the serial number of the product if any.
- 2) Warranty service work will be denied or suspended, on equipment not readily accessible to service personnel, that is products that are behind barriers, tiled or bricked in, installed in roofs or second story external walls including inaccessible power points.
- 3) Any service of any product which is found to be faulty due to abuse, fair wear & tear, misuse or improper installation will be charged to the owner at the service agents current servicing hourly rate.

Limitation of implied warranties:

THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusion of damages:

PENTAIR WATER’S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT.

ONGA SHALL NOT BE LIABLE FOR:

- 1) **DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE OF BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.**
- 2) **ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.**
- 3) **ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.**

Effective law:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Nothing in this warranty limits or restricts, or is intended to derogate from, any right or remedy which the purchaser or ultimate user of the product may have pursuant to Australian state and/or Australian federal consumer protection legislation, New Zealand Sale of Goods Act, Consumer Guarantees Act, Fair Trading Act or any other relevant and applicable New Zealand legislation or authority and where necessary shall so be read and construed.

IMPORTANT

Please attach your sales invoice/docket here as proof of purchase should warranty service be required.

Please do not return Warranty - Retain for your records.

Purchased From

Purchase Date..... Serial No..... Model No.....



Rainbow Pool Products

PO Box 2388, Mansfield Qld 4122

Telephone STD 61-7-3849 5385

Facsimile STD 61-7-3849 5384

Email: info@rainbowpoolproducts.com.au

Web: www.rainbowpoolproducts.com.au

© information contained here-in remains the property of Pentair Water Pty Ltd. Any reproduction, display, publication, modification or distribution is strictly prohibited without the prior written permission of Pentair Water Pty Ltd.

Disclaimer: Every endeavour has been made to publish the correct details in this Owner's Manual. No responsibility will be taken for errors, omissions or changes in product specifications. Pentair Water reserves the right to change specifications